



Cruise control system (CCS), engine codes AHL, ADP, AEB, ACK,

from October 1996

For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.

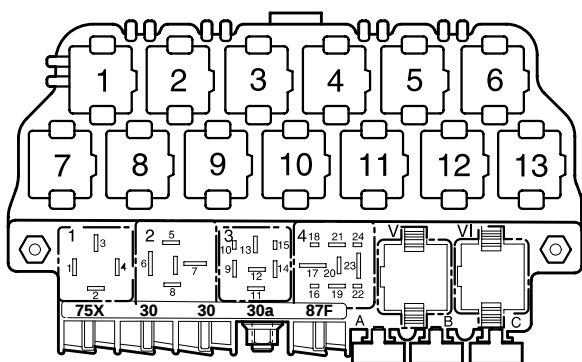

97-20676

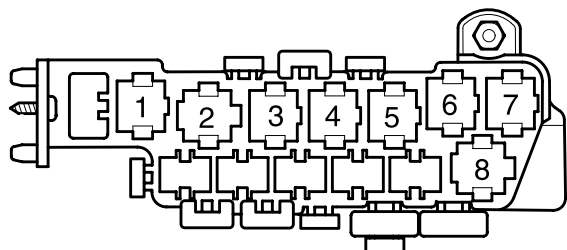

97-20515


Relay locations on 13 position additional relay carrier, above relay plate:

Relay locations on relay plate:

Relay locations on the 8 position additional relay carrier, behind the relay plate:

Fuse colours

30 A – green
25 A – white
20 A – yellow
15 A – blue
10 A – red
7.5 A – brown
5 A – beige
3 A – lilac

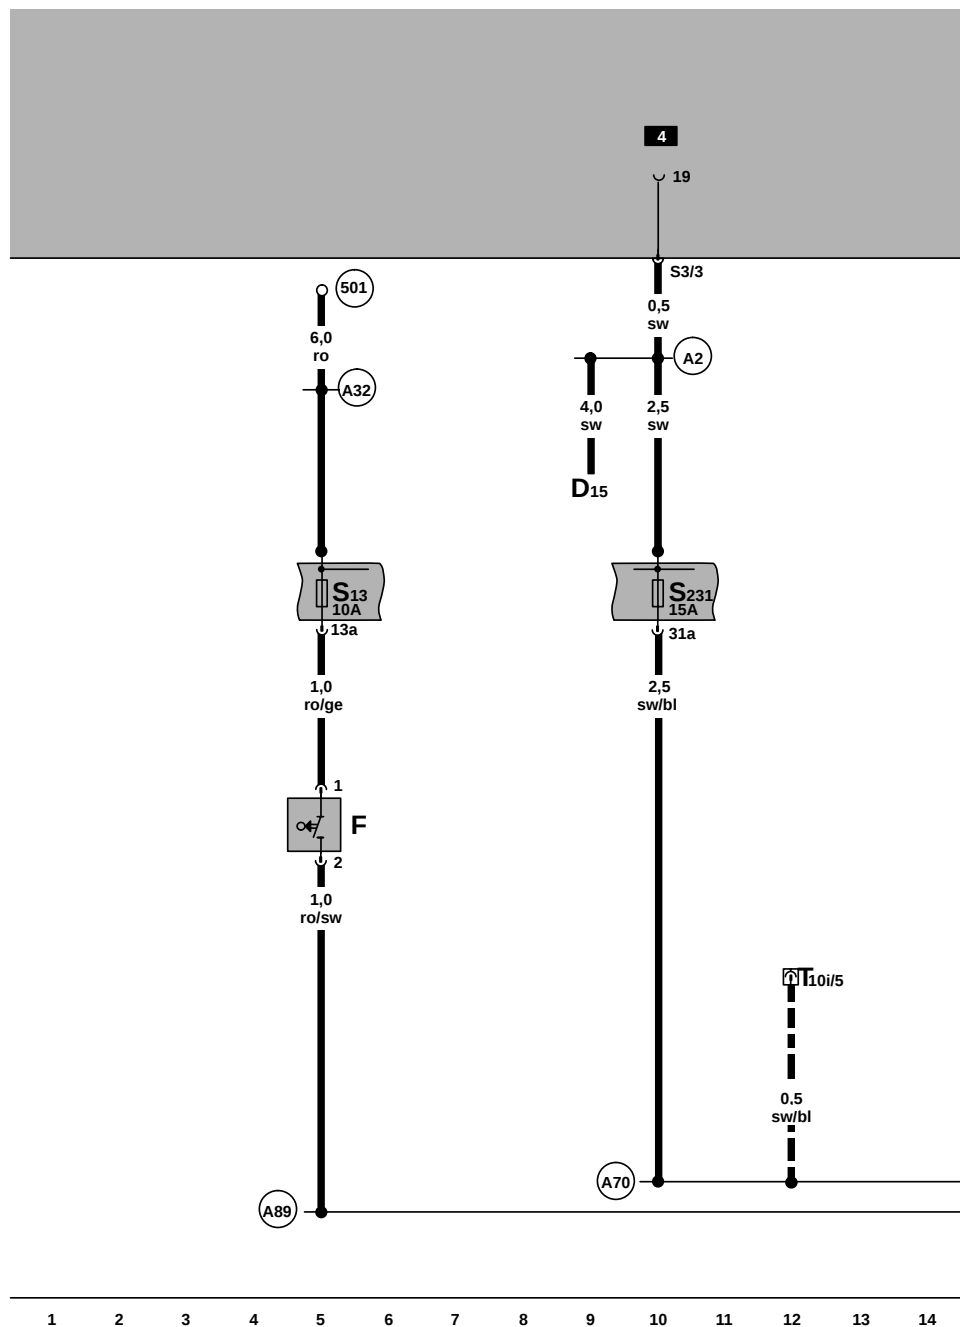

Brake light switch

- D – Ignition/starter switch
- F – Brake light switch
- S13 – Fuse in relay plate fuse box
- S231 – Fuse in fuse holder
- T10i – 10-pin connector, blue, coupling station right A-pillar, automatic gearbox only

- (501) – Screw connection -2- (30), on relay plate
- (A2) – Positive (+) connection (15), in dash panel wiring harness
- (A32) – Positive connection (30), in dash panel wiring harness
- (A70) – Connection (15a, fuse 231), in dash panel wiring harness
- (A89) – Connection (brake light switch), in dash panel wiring harness

--- For vehicles with automatic gearbox only

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow


CCS control unit, CCS switch, clutch pedal switch, CCS brake pedal switch

- E45 – Cruise control system switch
Position 0 = OFF in detent
Position 1 = OFF with button
Position 2 = ON
Position 3 = RES
- E227 – Cruise control system (CCS) button (Set)
- F36 – Clutch pedal switch
- F47 – Cruise cont. sys. brake pedal switch
- J213 – Cruise control system control unit, right behind dash panel, behind passenger's airbag
- J217 – Automatic gearbox control unit
- T10 – 10-pin connector, black, right next to steering column
- T10m – 10-pin connector, brown, coupling station right A-pillar
- T12 – 12-pin connector, brown, on CCS control unit
- T68a – 68-pin connector, on automatic gearbox control unit (4 speed automatic)
- T88 – 88-pin connector, on automatic gearbox control unit (5 speed automatic)

- (A70) – Connection (15a, fuse 231), in dash panel wiring harness
- (A89) – Connection (brake light switch), in dash panel wiring harness

--- For vehicles with automatic gearbox only

* – For vehicles with manual gearbox only

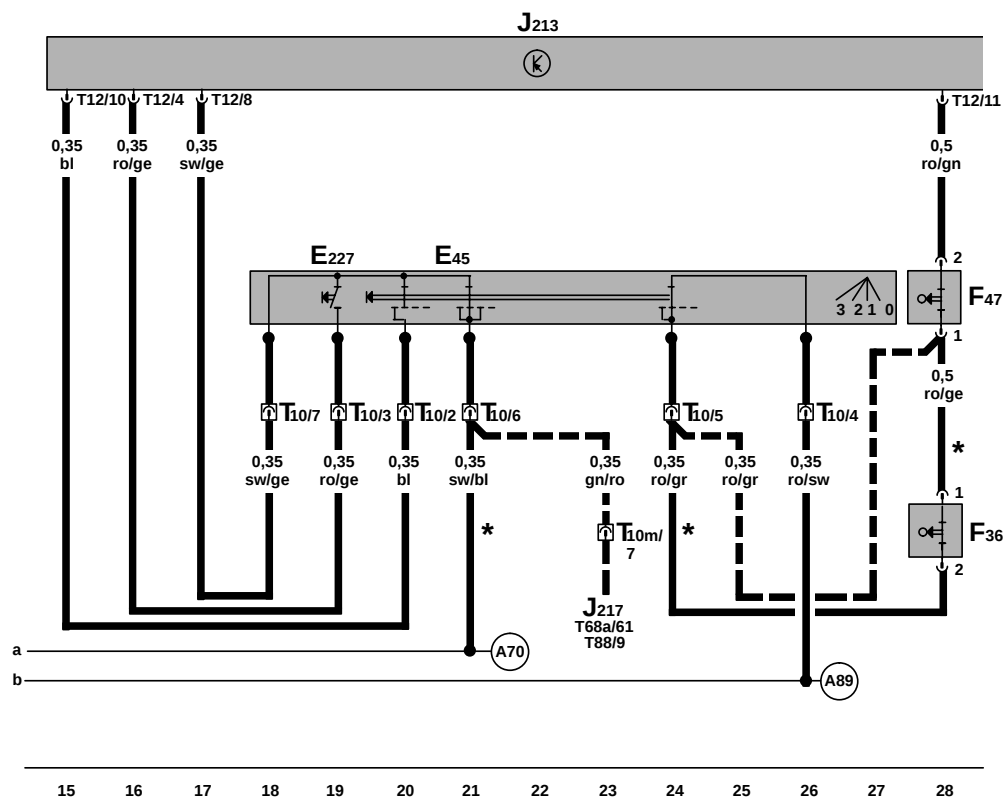

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow

- J213 – Cruise control system control unit, right behind dash panel, behind passenger's airbag
- T3 – 3-pin connector
- T6q – 6-pin connector, black, left A-pillar coupling station
- T12 – 12-pin connector, brown, on CCS control unit
- V18 – Vacuum pump, autonomous cruise control unit

- 32 – Earth point, behind dash panel, left
- 81 – Earth connection -1-, in dash panel wiring harness
- 135 – Earth connection -2-, in dash panel wiring harness
- A27 – Connection (speed signal), in dash panel wiring harness
- ** – For engine code AEB and ACK only

